


BASIC INSTALLATION INSTRUCTIONS


- 1** The TurboTap attaches to conventional faucets using two o-rings. To make installation easier, first wet the o-rings with water or beer.



- 2** To install, push the TurboTap up around the spout of the faucet. It may help to twist while pushing.

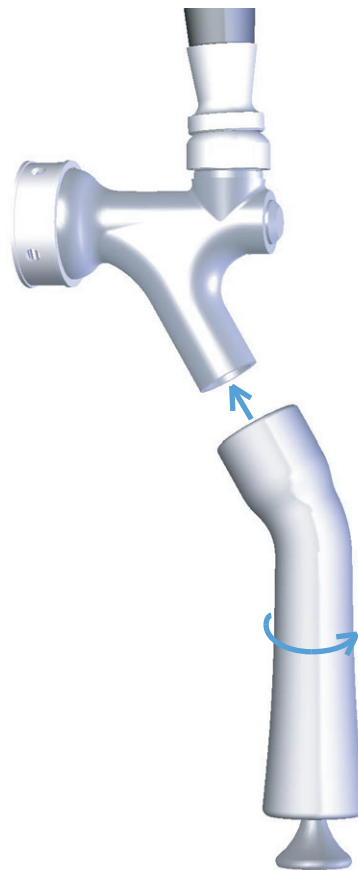

- 3** Be sure that the end of the faucet has passed both o-rings. The TurboTap must be positioned against the end of the faucet spout.

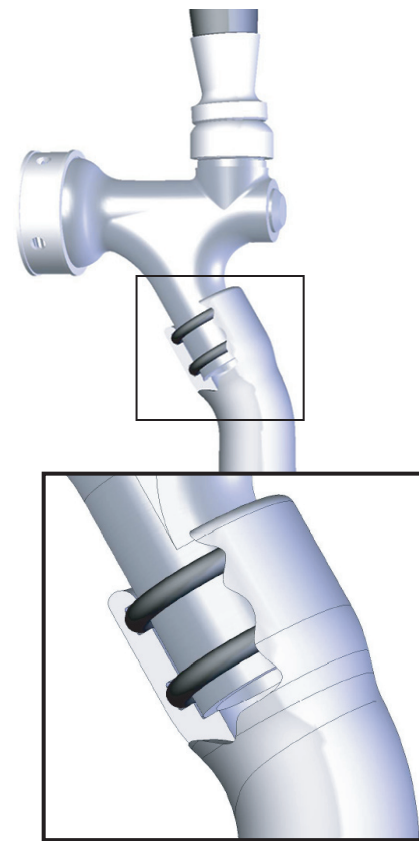

- 4** If working with a locking TurboTap, tighten the set screws to lock the TurboTap in place. To ensure proper alignment, tighten each screw an equal number of turns.

